

COMFAST

Quick Installation Guide




Wireless Router
M0304356 Version2.0


1 Connection Diagram

1.1 If use dial-up internet, pls follow up below connection steps 1.2.3.4; If use broadband internet, pls follow up below connection steps 2.3.4 and connect WAN port of wireless router to internet directly.

Dial-up Internet

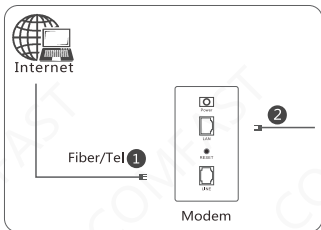

Broadband Internet

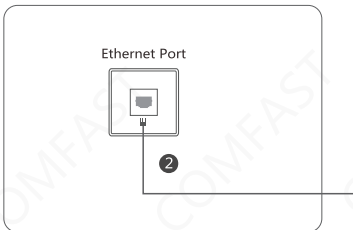


Wireless Connection

Scan wireless signal and the SSID
COMFAST_MAC last 6 numbers/
COMFAST_MAC last 4 numbers_2G



 Wireless Router



Power Socket




2 Connect WAN Port

4 Power Port

3 Connect LAN Port

Wired Connection

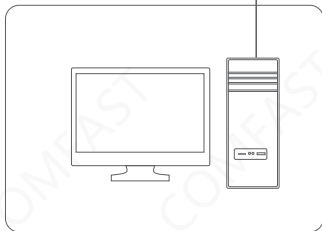


2 Setting Steps

2.1 Wait for 20 seconds for the device to power on. Search for SSID (COMFAST_XXXXX) wirelessly, or connect the LAN port of the device with a network cable. Input IP (192.168.10.1) to enter the device management page and set the login password for the management page.



The image shows a screenshot of the COMFAST web management interface. At the top left is the COMFAST logo. Below it, there are two text input fields: "Set password" and "Confirm password". Below these fields is a black circular button with a white right-pointing arrow.

2.2 Setting Network Type Router (PPPoE, User Name, Server Name)

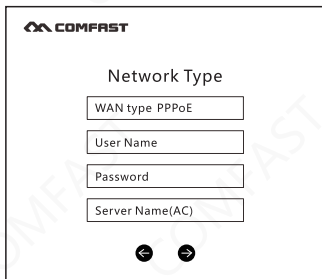

The image shows a screenshot of the COMFAST web management interface for network configuration. At the top left is the COMFAST logo. Below it is the title "Network Type". There are four text input fields stacked vertically: "WAN type PPPoE", "User Name", "Password", and "Server Name(AC)". At the bottom of the screen are two black circular buttons with white arrows pointing left and right.

2.3 Set the wireless SSID and click  to complete the setup.



COMFAST


Please set your SSID and wireless Internet access password

SSID

Wireless password


 


2.4 Login input the password and the next step is to enter the home page.




COMFAST

Password

 Forget password



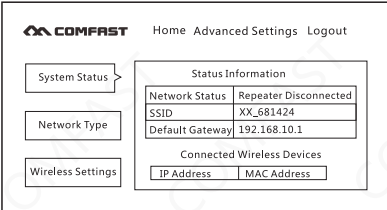

COMFAST Home Advanced Settings Logout

System Status

Network Type

Wireless Settings

Status Information

Network Status	Repeater Disconnected
SSID	XX_681424
Default Gateway	192.168.10.1

Connected Wireless Devices

IP Address	MAC Address
------------	-------------

2.5 Modify the Router mode network type and wireless basic information.

COMFAST Home Advanced Settings Logout

System Status

Network Type

Wireless Settings

Status: Repeater Disconnected

WAN type	DHCP	Detect
----------	------	--------

IP Address : 0.0.0.0

Subnet Mask : 0.0.0.0

Geteway : 0.0.0.0

SSID	XX_681424
------	-----------

Password	••••••••
----------	----------

Save

2.6 Repeater Mode Settings: Go to Advanced Settings - Wireless Settings - Repeater.

COMFAST Home **Advanced Settings** Logout

Network Parameters

Wireless Settings

Wireless Basic Settings
Advanced
 Repeater

Please select your primary need bridging router

Wireless Name	MAC Address	Encry Mode	Signal Strength	Select
11111111	44:0c:00:e1:00:4p	WPA/WPSK2	89	<input type="radio"/>
2222_2G	35:0c:73:e1:76:gg	WPA/WPSK2	85	<input type="radio"/>
333333	63:00:43:e1:76:13	WPA/WPSK2	80	<input type="radio"/>
5555	78:0c:43:e1:3y:00	NONE	80	<input type="radio"/>
23	13:0c:11:00:76:28	WPA/WPSK2	79	<input type="radio"/>
77	89:0c:43:e1:76:fa	NONE	78	<input type="radio"/>

3 FAQ

1. If forget the login name and password of the device , what should I do(how to reset the router)?

A. If you forget the login name and password of the device, the only way you can do is do factory reset to the device, then the login name and password will be restored to their default values. At the bottom of the device there is a Reset button, when power is on, press and hold the button for 10 seconds, after the indicator LED has blinked 3 times rapidly, release the button and finished the Reset operation.

2. What if i can't open the administrator page of device in browser?

A. Please make sure the ip address of your computer is in the same network segment as the IP address of the device administrator page you typed in browser: for example, if your device default login IP address is 192.168.10.1, then the IP address of your computer should have been 192.168.10.x(x is any integer between 2 and 254):

B. Please make sure your browser setting is "Never dial a connection" and disable proxy; Here is the steps of configuration (suppose you use IE): Click "Tools"- "Internet Options"- "Connections", choose "Never dial a connection"; Click "Lan settings", remove the option of "Proxy server".

C. Try change another computer to log in: If all the 3 hints above can't help you, please do the Factory Reset Operation to the device and log in again.

3. Why my laptop can't search out the signal of Wi-Fi SSID?

A. If your laptop has network adapter built-in, please make sure the Wi-Fi function is enabled (we recommend you connect the laptop vendor or read the laptop user manual);

B. At device manager interface, check whether the driver of network adapter has been installed successfully;

C. Check whether the wifi service has been turned on, right click the icon "my computer" on your desktop, choose manage. In "Computer Management" wizard, click "Services and Applications", then on the page of "Service", find the item "Wireless Zero Configuration" and check its Status value.

D. Please make sure you've enabled the wifi capability and enabled SSID broadcast.

E. Get closer to the router and try search again, Avoid the factor of obstacles which reduce the intensity of signal; If the hints above can't help you, please check out whether another wireless network adapter can connected to the router. If it still don't work, please do the factory reset operation to restore the parameters back to their default values.

Maintenance Regulations

Dear Valued Clients,

Thank you for purchasing a **COMFAST** products and service to protect your rights, please read the following maintenance regulations.

The following does not belong to free maintenance ,our company can provide paid service ,please note:

- Failure to require the installation manual , use ,maintenance, storage lead to product failure or damage;
- Beyond the limited warranty , the warranty period;
Unauthorized alteratiion, tearing up the product bar code;
- Without authorization to change the settings file or inherent disassemble without authorization;
- Unexpected factors or human actions lead to product damage, such as improper input voltage, temperature, watermechanical damage, break, rust or serious oxidation of product ,etc;
- Other non-product itself, design ,technology,manufacturing, quality and other quality problems caused by the failure damage.

Certificate Of Qualification

Quality Inspector _____

Production Date _____

Executive Standard _____



YD/T 1965-2009

Quick Installation Guide

Statement

**Shenzhen Four Seas Global Link Network
Technology CO.,Ltd.Company
all rights reserved.**

Without our official written permission, no unit or individual shall be copied, reproduced, transcribed or translated in part or whole book. In any form or by any means (electronic, mechanical, printing, recording or other possible means) or for the propagation of goods any commercial, profitable purposes.

COMFAST is the registered trademark of Shenzhen Four Seas Global Link Network Technology Co., Ltd. Company. All other trademarks or registered trademarks mentioned in this document, by respective owners.

Product specifications and information mentioned in this manual are for reference on subject to updates without notice. Unless there are other special agreements, this manual is used only as a user guide. All statements, information, etc. are not constitute any form of guarantee

Manufacturer: Shenzhen Four Seas Global Link Network
Technology Co., Ltd. Company

Address: Room 607-610, Block B Tao JINDI Electronic
Business Incubation Base, Tenglong Road, Longhua
District, Shenzhen, China

Hotline: 4009-001-766

Website: en.comfast.com.cn